INSTALLATION INSTRUCTIONS

For Model 9273-277

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

MOUNTING THE FIXTURE (Fig.1)

1. Shut off power at the circuit breaker and remove the old fixture, including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any parts necessary for installation.
3. Attach the mounting plate to the outlet box with the two outlet box screws as shown. The side of the mounting plate marked “GND” must face out.

COMPLETING THE INSTALLATION

4. Install the glass to lamp frame with glass retainer clips.
5. Install the bottom circle with the Phillips screws.
6. Install 3*60w B10.5 bulbs in accordance with the fixture’s specification. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!)**

CONNECTING ELECTRICAL (Fig.2)

7. Connect the electrical wires as shown in (Fig.2), making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture ground wire to it. Otherwise, connect the fixture ground wire directly to the mounting plate using the green screw provided.
8. Align the fixture to the mounting screws on the mounting plate and secure with knurled knobs (Fig1).
9. To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. Indoor/Outdoor Silicone Sealant) to outline the outside off fixture back-plate where it meets the wall leaving a space at bottom to allow moisture a means to escape (Fig3).

Your installation is now complete. Return power to the junction box and test the fixture.

<u>Note:</u> Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased

Fig.1

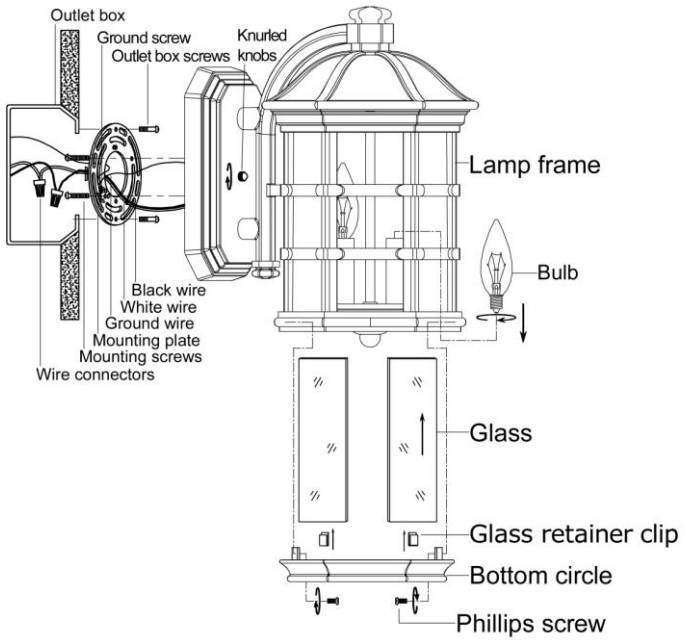

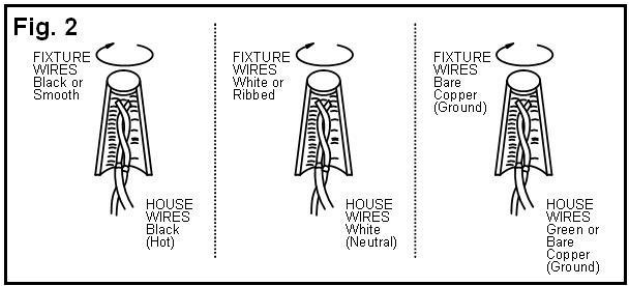
Fig. 2
FIXTURE WIRES Black or Smooth
FIXTURE WIRES White or Ribbed
FIXTURE WIRES Bare Copper (Ground)
HOUSE WIRES Black (Hot)
HOUSE WIRES White (Neutral)
HOUSE WIRES Green or Bare Copper (Ground)

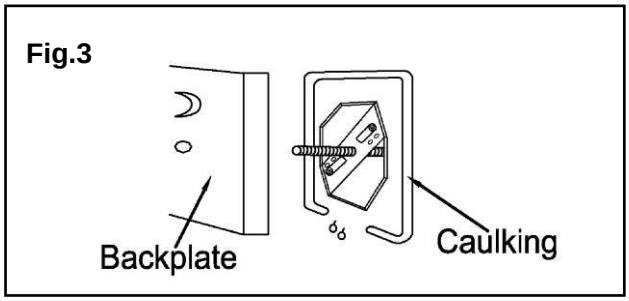

Intertek

american lighting association